


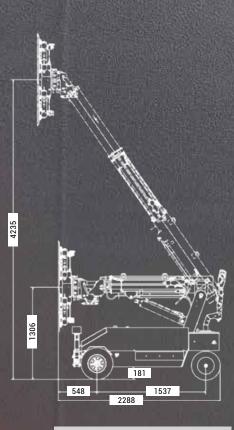

Increased stability Outtriggers ensuring a higher load capacities with a compact design.



Anti-fall protection Through the use of laser technology. The Glassworker stops automatically if there is a risk of falling off.



Vacuum cross The vacuum cross is remo-

vable and can optionally be used individually as a vacuum cup with load hook with a quick-fit tilting bracket.



Quick-change The vacuum cross can be dismantled without tools.

UPLIFTER GW 1125

The Beast – for the really big tasks!

Max. load capacity 1.125 kg


- Max. Lifting height 4.55 m Maximum range to the front 2.32 m Radio remote control with LCD panel
- Electric/hydraulic control
- Vacuum cross removable without tools Vacuum cross individually configurable Self monitoring system accessories:
- Tilting bracket for vacuum cross, electr. cable winch, transport frame for vacuum unit, NON-marking tyres, integrated fall protection, support legs individually controllable, double tyres, holder for suction cup extensions, adapter to use GW 625 accessories, etc.



YouTube The Beast!



Functions & Details

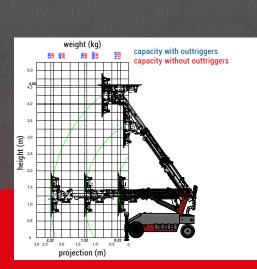





Uplifter GmbH & Co. KG Uplifter in Oberaich | Head office Oberaich 5 | DE-92543 Guteneck +49 9433 20499 0





www.uplifter.com